

Ai ALERT™ EXTRA

SELF ADHESIVE HEAT DETECTORS

1. Prepare and Position the AiAlert™ Extra

- The AiAlert™ Extra detector should be positioned across the backbone of the cow, just behind the hips.
- If the animal is moulting or is heavily soiled use a brush to gently remove any hair and mud, etc.
- Remove dust and dirt using the tack cloth supplied.
- Warm the detectors if the ambient temperature is below -5°C/23°F (place in a heated room/space which is above -5 °C for a short period or use body heat).



2. Apply the AiAlert™ Extra

Avoid applying any force to the pressure-sensitive capsule during this process!

- The detector must be applied with the arrows pointing forward.
- Remove the detector from the backing paper, taking care not to bend the capsule area, and then place in position on the cow.
- Press down firmly on the side panels and rub towards the head of the animal using the pads of your fingers. Press on each side for a minimum of 5 seconds and repeat at least twice.
- Finish by pressing firmly at the top and bottom and around the edges of the detector.



3. Hints and Tips

- Try not to brush or wipe too hard or you will disturb the natural oils in the coat and this will reduce adhesion.
- Do not apply the detector over tail paint or any other hair treatment.
- Only apply when the cow is dry.
- Consider removing any obstacles such as rotary back scratchers against which the cow may rub and so activate or dislodge the detector.
- Do not apply on bare skin.
- On taller cows position the detector a little further back (nearer but not on the tail head) so the brisket of the mounting cow(s) can reach and activate the detector.
- AiAlert™ Extra can also be used after insemination to identify three week returns.

Ambic Equipment Limited, 1 Parkside, Avenue Two, Station Lane,
Witney, Oxfordshire, OX28 4YF, England
Tel: +44 (0)1993 776555 Fax: +44 (0)1993 779039
www.ambic.co.uk

Ai ALERT™ EXTRA

SELF ADHESIVE HEAT DETECTORS

1. Prepare and Position the AiAlert™ Extra

- The AiAlert™ Extra detector should be positioned across the backbone of the cow, just behind the hips.
- If the animal is moulting or is heavily soiled use a brush to gently remove any hair and mud, etc.
- Remove dust and dirt using the tack cloth supplied.
- Warm the detectors if the ambient temperature is below -5°C/23°F (place in a heated room/space which is above -5 °C for a short period or use body heat).



2. Apply the AiAlert™ Extra

Avoid applying any force to the pressure-sensitive capsule during this process!

- The detector must be applied with the arrows pointing forward.
- Remove the detector from the backing paper, taking care not to bend the capsule area, and then place in position on the cow.
- Press down firmly on the side panels and rub towards the head of the animal using the pads of your fingers. Press on each side for a minimum of 5 seconds and repeat at least twice.
- Finish by pressing firmly at the top and bottom and around the edges of the detector.



3. Hints and Tips

- Try not to brush or wipe too hard or you will disturb the natural oils in the coat and this will reduce adhesion.
- Do not apply the detector over tail paint or any other hair treatment.
- Only apply when the cow is dry.
- Consider removing any obstacles such as rotary back scratchers against which the cow may rub and so activate or dislodge the detector.
- Do not apply on bare skin.
- On taller cows position the detector a little further back (nearer but not on the tail head) so the brisket of the mounting cow(s) can reach and activate the detector.
- AiAlert™ Extra can also be used after insemination to identify three week returns.

Ambic Equipment Limited, 1 Parkside, Avenue Two, Station Lane,
Witney, Oxfordshire, OX28 4YF, England
Tel: +44 (0)1993 776555 Fax: +44 (0)1993 779039
www.ambic.co.uk